

AFD-200

SET-UP AND CLOSE PROCEDURES

Daily Set-Up

1. Verify the Compressor pressure is at least 80 PSI (5.4 bar).
2. Connect the Air Line to the back of the Arch Fry Dispenser by pushing the Quick Coupler onto the Coupler Nipple until it is secure.

NOTE: The Arch Fry Dispenser has a self-purging water trap in it. If the Air Line is connected to the Arch Fry Dispenser before the Compressor is at full pressure, the purge valve may remain open, which will prevent the Compressor from building pressure.

3. Verify that the Power Switch is in the OFF position.
4. Plug the Power Cord into a wall outlet.
5. Load the Hopper with frozen French Fries. **DO NOT SHAKE OR DROP** the Fries into the Hopper.
6. Turn the Load Select Switch to the desired load weight.
7. Fill the Upper Guide with empty Fry Baskets.
8. Turn the Power Switch to the ON position (illuminated).
9. Press the Start/Reset Button. Automatic basket loading will begin at the load weight selected.
10. Use filled Fry Baskets from the Lower Guide for French Fry production.
11. Return each empty Fry Basket to the Upper Guide for refilling after the cooking cycle is complete.

Daily Closing

1. Turn the Power Switch to the OFF position.
2. Remove all Fry Baskets from the upper and Lower Guides. Discard and record the uncooked Fries.
3. Remove the Hopper Lid by lifting it straight UP and OFF of the Hopper.
4. Discard and record any Fries remaining in the Hopper at closing.
5. Check that the Accumulator Doors are empty of Fries.
6. Disconnect the Air Line from the back of the Arch Fry Dispenser by grasping the collar on the Quick Coupler and pulling back until it releases from the Coupler Nipple.

NOTE: Disconnecting the Air Line from the Arch Fry Dispenser every day is an important part of Preventative Maintenance. Releasing the air pressure allows the self-purging water trap to drain, thus preventing the water from getting into the system.

1. Disconnect the Power Cord from the electrical outlet.
2. Remove the Fry Diverter by grasping it and pulling it UP.
3. Slide the Locking Pins outward to release the Hopper.
4. Remove the Hopper (and the Dispenser Drum inside) by pulling the Hopper OUT and AWAY from the Hopper Support Bars.
5. Remove the Upper Guide assembly by sliding it to the LEFT then lifting it straight UP.
6. Remove the Lift Saddle by grasping the back support bar with both hands and lifting straight UP.
7. Remove the Lower Guide assembly by sliding it to the RIGHT then lifting straight UP.
8. Take the hardware removed from the Arch Fry Dispenser to the back sink. Wash it in a hot solution of **McD APC (HCS)**, and sanitize. Wipe dry.

NOTE: Do **NOT** roll the dispenser to the back sink for cleaning. This will cause unnecessary wear on the dispenser.

9. Wipe down the Arch Fry Dispenser with a hot solution of **McD APC (HCS)** and water. Repeat wipe-down with clear water to rinse away cleanser residue.

NOTE: Do **NOT** spray down the dispenser. It is not sealed, and contamination may get into sensitive components.

10. Dry all parts and reassemble the Arch Fry Dispenser.