

Hopper Assembly

GDF28


Disassemble

Slide the locking pins outward and pull the hopper assembly from the dispenser.



Clean

Daily

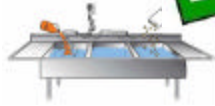

Warning: The drum, hopper and hopper lid are NOT dishwasher safe.

Align hopper indents with support bars. Rotate the drum to align with the drum shaft. Slide the locking pins inward.



Reassemble

Guides, Drip Tray

Disassemble

Remove the upper and lower guides. Remove the drip tray.



Clean

Daily



Warning: The crumb tray is NOT dishwasher safe.

Install the upper and lower guides. Install the drip tray.



Reassemble

Dispenser

Disassemble

Wipe the dispenser with hot sanitizing solution and water.



Clean

Daily



Wipe Down with sanitizing solution.



Do not spray down with water.

Reassemble