

Bulletin #8

Automated Equipment, LLC

5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
<http://www.autoequipllc.com>



Water trap bowl cleaning.

Issue:

Air leaking from the regulator drain tube.

Symptoms:

Error #1.

Compressor cycling on and off when the dispenser is standing idle.

Steps to resolve the problem:

1. Turn the power off and unplug the power cord.
2. Remove the back panel.
3. Drain the air pressure from the dispenser by pulling the ring on the pressure safety valve at the top of the air tank.
4. Remove the water trap bowl guard, if it has one, by pressing the locking tab and rotating the guard to the left.
5. Remove the water trap bowl. (unscrew to the left, it may be very tight but do not use pliers).
6. If the water trap bowl is plastic check for cracks at the bottom by the drain fitting.
7. Wash the inside of the water trap bowl by filling the bowl ½ full with hot soapy water, cover the top of the bowl with your hand and shake vigorously.

Note: Do not attempt to disassemble the water trap and water trap bowl.

8. Rinse the bowl with clean water.
9. Reinstall the water trap bowl and test.
10. If it continues to leak replace the water trap bowl.

