

Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
 http://www.autoequipllc.com




Câblage de commutateur pour les distributeurs AFD-200, AFD-280, AFD-280U, AFD-280E et GDF28.

Assembly and disassembly instructions


Mounting adaptor

Assembly

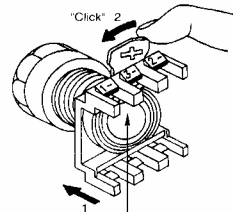

Embossed word "TOP" on back of operator


Disassembly

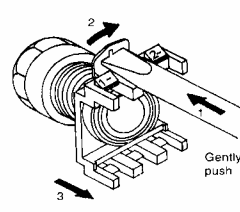


Note: Gently push locking lever and turn as shown over locking rib

Contact blocks and full voltage light units

Assembly

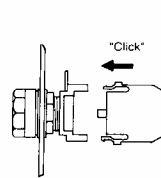


Disassembly

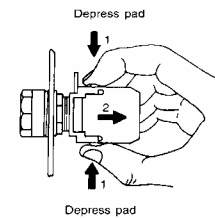

Lamp replacement

Rear of panel


Disconnect power.
 Remove light unit as shown opposite.
 Remove bayonet type lamp (push and turn counter-clockwise).
 Insert new lamp.
 Reassemble light unit to operator as shown opposite.

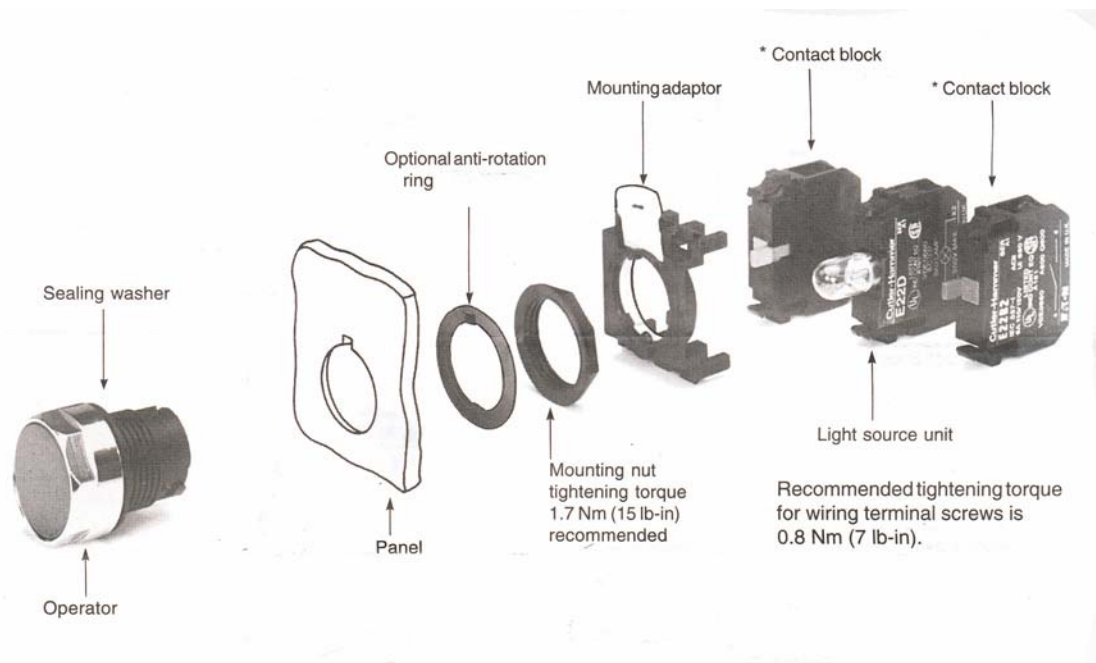



Recommended tightening torque for wiring terminal screws is 0.8 Nm (7 lb-in).

Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
<http://www.autoequipllc.com>

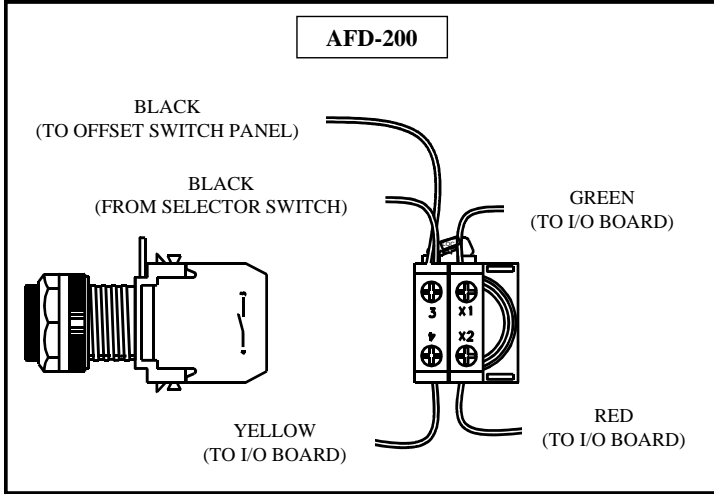


Commutateur de réinitialisation n° de pièce 215606
 La commande du commutateur est en vente séparément. n° de pièce 290771
 Ampoule de remplacement n° de pièce 216489


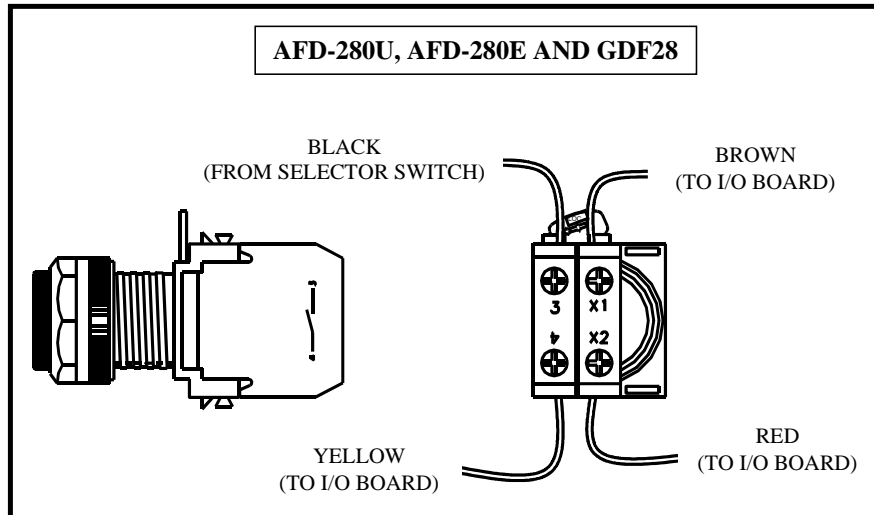
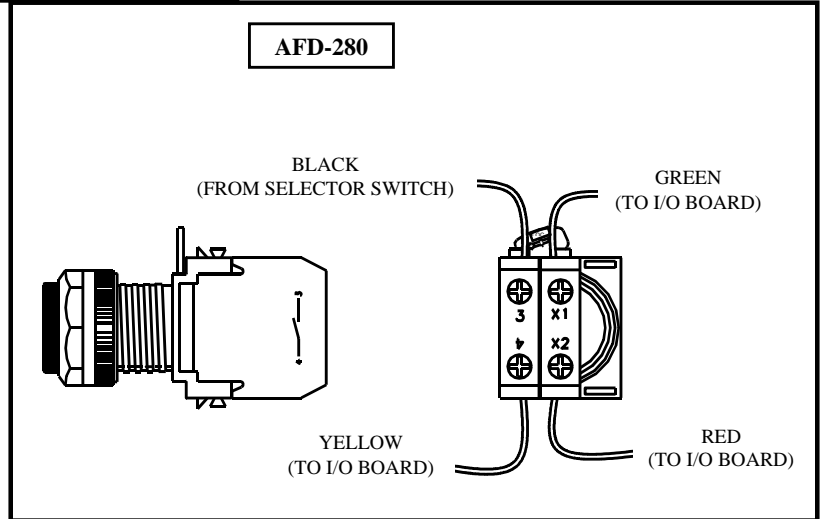


Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
<http://www.autoequiplc.com>

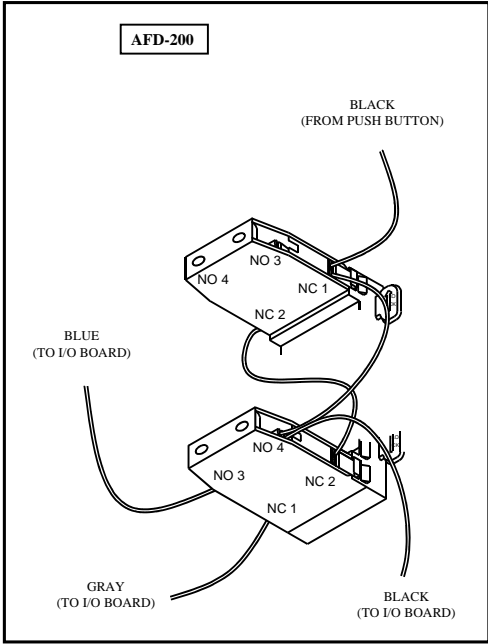

Commutateur de sélection n°215607

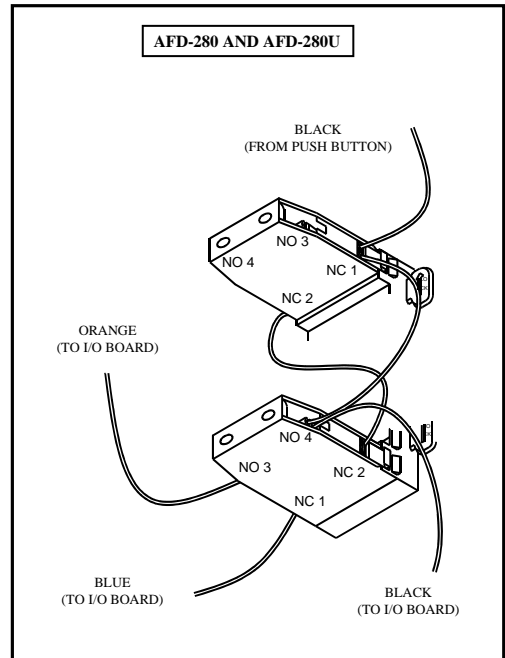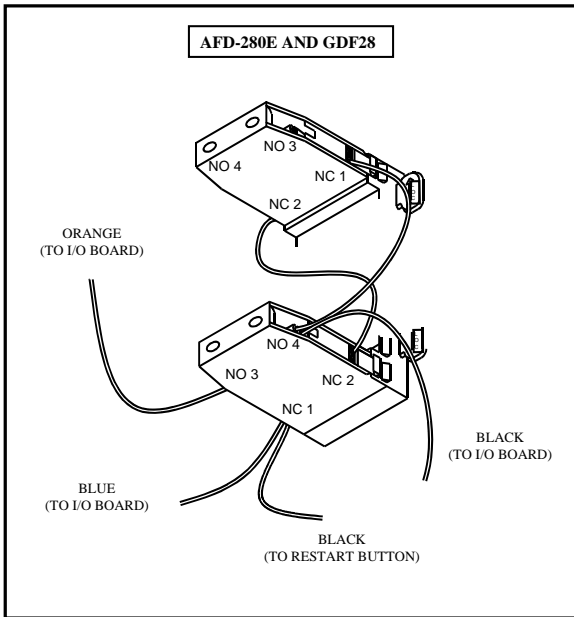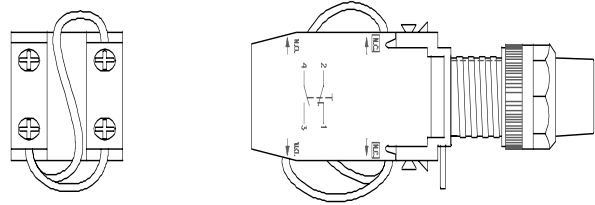

Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
<http://www.autoequipllc.com>



Commutateur d'alimentation

