

Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
 http://www.autoequipllc.com




Switch wiring for AFD-200, AFD-280, AFD-280U, AFD-280E and GDF28 dispensers.

Assembly and disassembly instructions


Mounting adaptor

Assembly

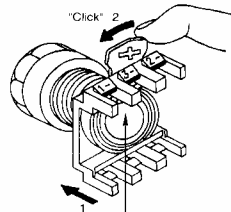

Embossed word 'TOP' on back of operator


Disassembly

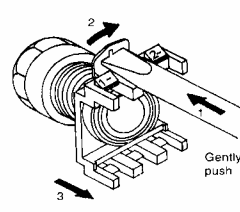


Note: Gently push locking lever and turn as shown over locking 'rib'

Contact blocks and full voltage light units

Assembly

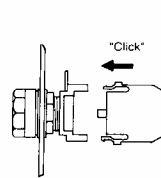


Disassembly

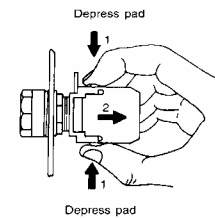

Lamp replacement

Rear of panel


Disconnect power.
 Remove light unit as shown opposite.
 Remove bayonet type lamp (push and turn counter-clockwise).
 Insert new lamp.
 Reassemble light unit to operator as shown opposite.

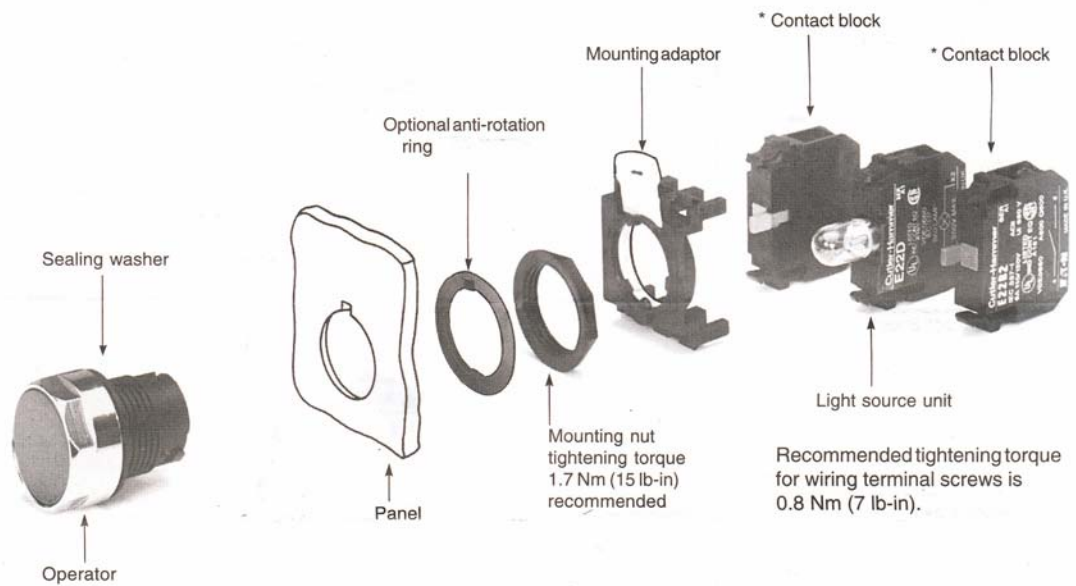



Recommended tightening torque for wiring terminal screws is 0.8 Nm (7 lb-in).

Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
<http://www.autoequipllc.com>

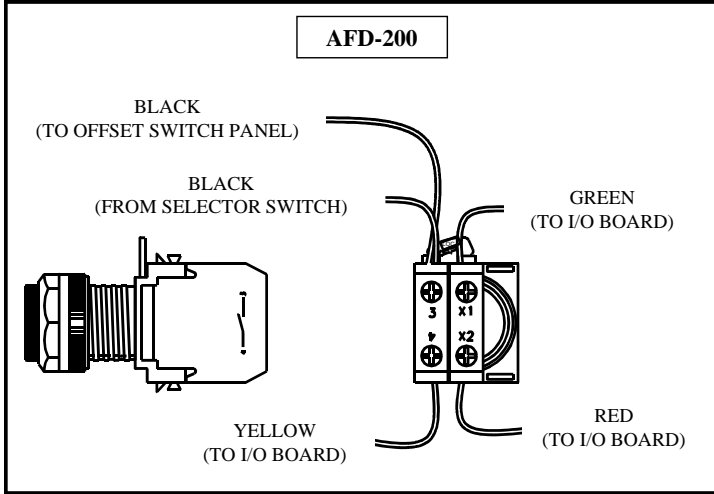


Restart Switch P/N 215606
 The restart switch operator is available separately. P/N 290771
 Replacement bulb P/N 216489


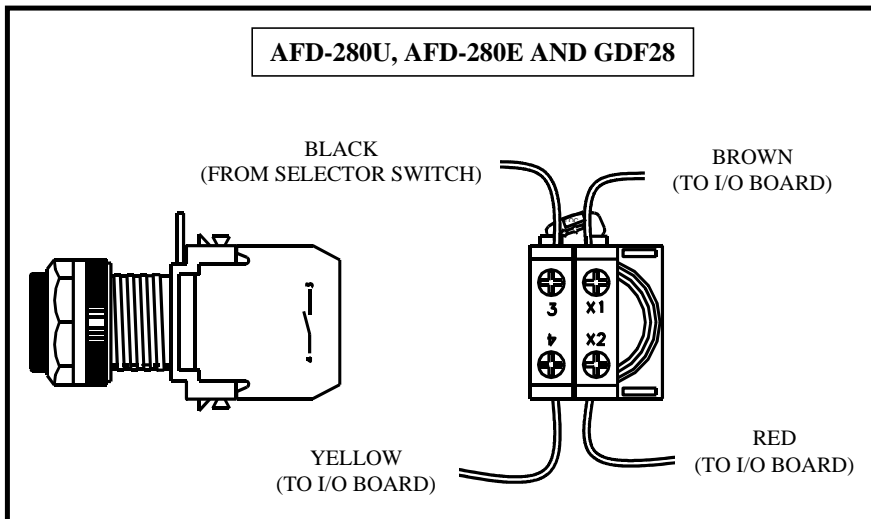
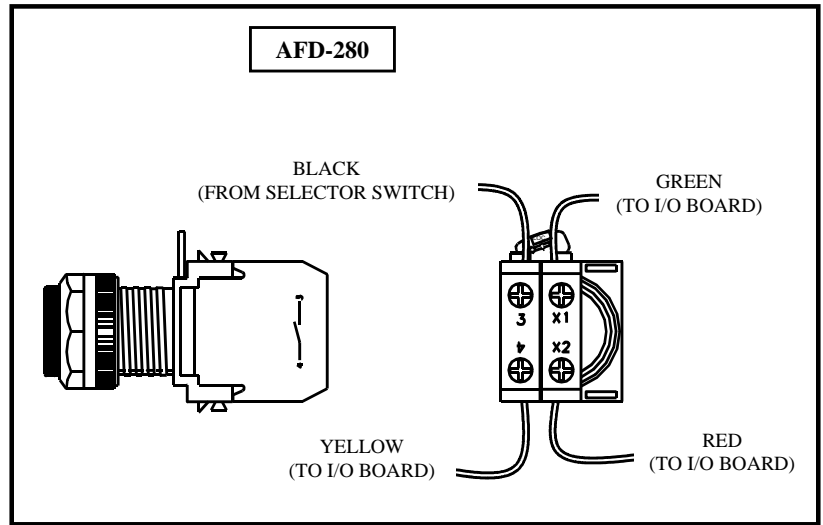


Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
<http://www.autoequiplc.com>

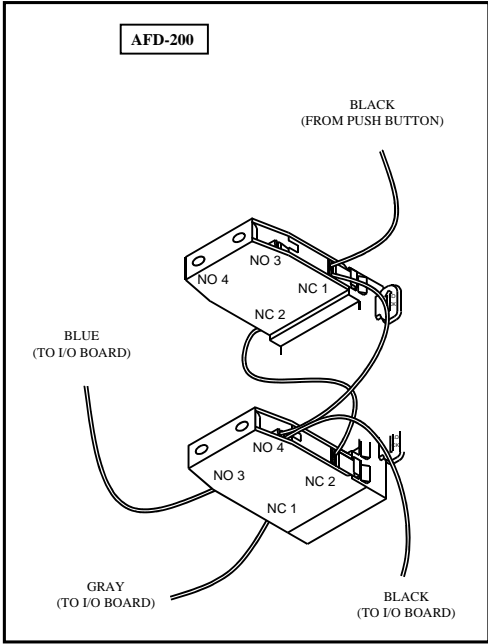

Selector Switch P/N 215607

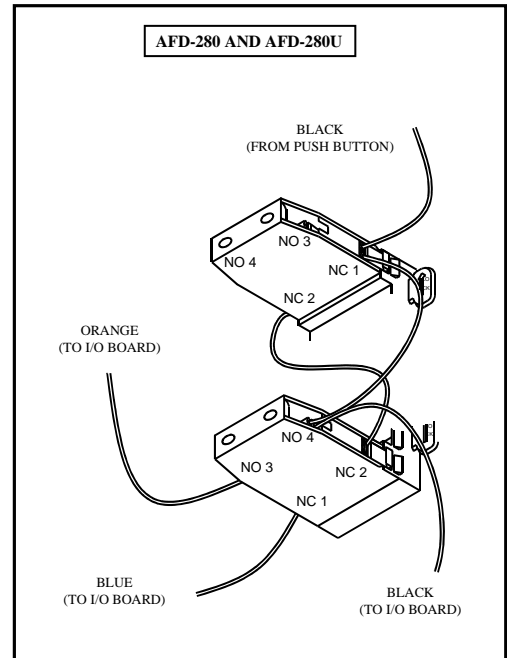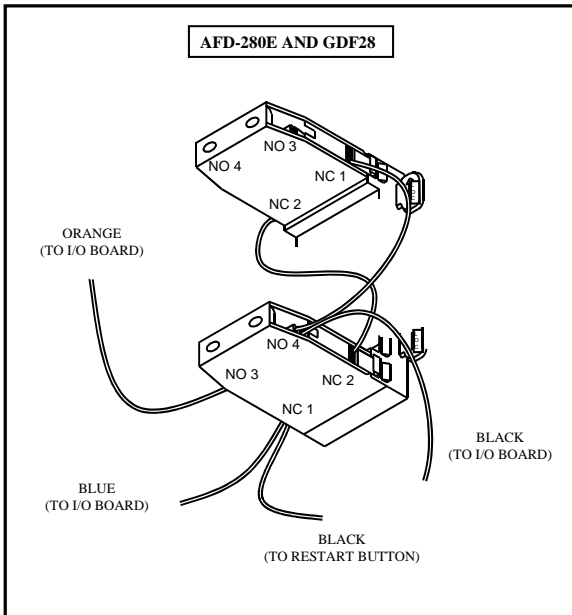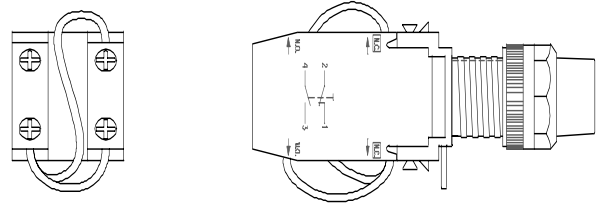

Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
<http://www.autoequipllc.com>



Power Switch

