

Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
 http://www.autoequipllc.com




Schalterverkabelung für AFD-200, AFD-280, AFD-280U, AFD-280E und GDF28 Dispenser.

Assembly and disassembly instructions


Mounting adaptor

Assembly

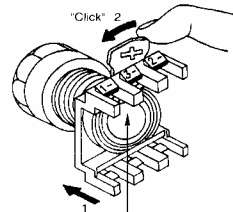

Embossed word 'TOP' on back of operator


Disassembly

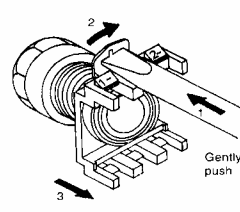


Note: Gently push locking lever and turn as shown over locking 'rib'

Contact blocks and full voltage light units

Assembly

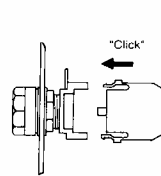


Disassembly

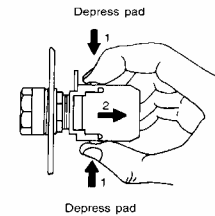

Lamp replacement


Rear of panel

Disconnect power.
 Remove light unit as shown opposite.
 Remove bayonet type lamp (push and turn counter-clockwise).
 Insert new lamp.
 Reassemble light unit to operator as shown opposite.


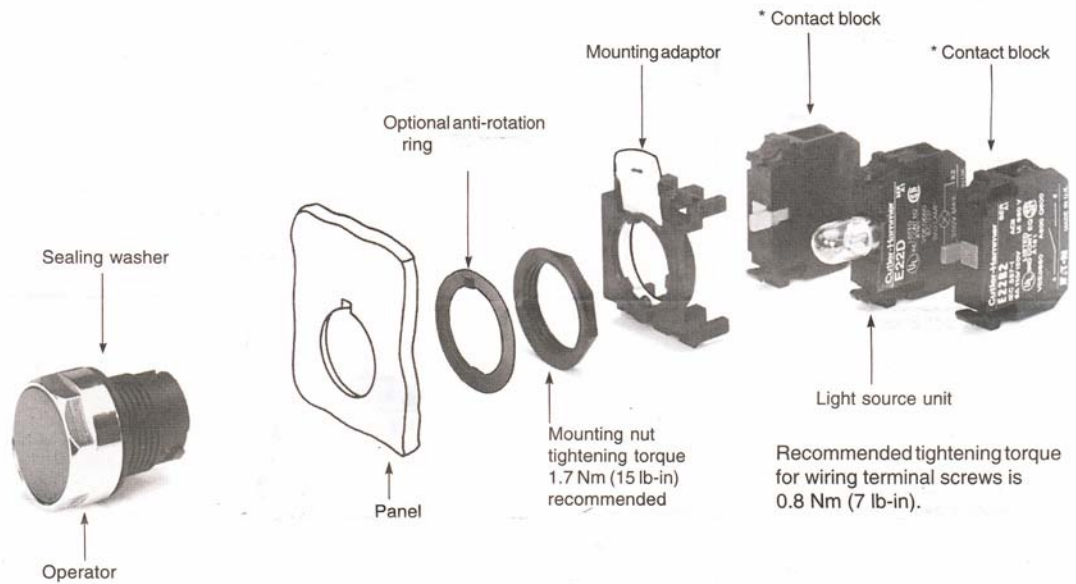


Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
<http://www.autoequipllc.com>

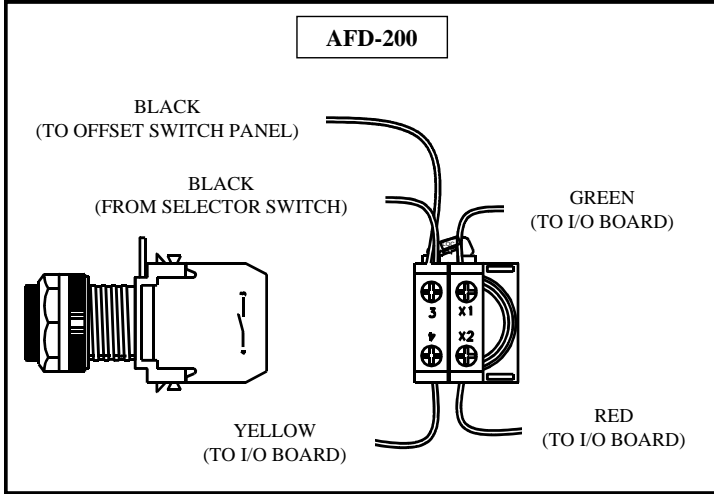


Neustartschalter T/N 215606
 Die Neustartschalterbedienung ist separat erhältlich. T/N 290771
 Ersatzglühbirne T/N 216489


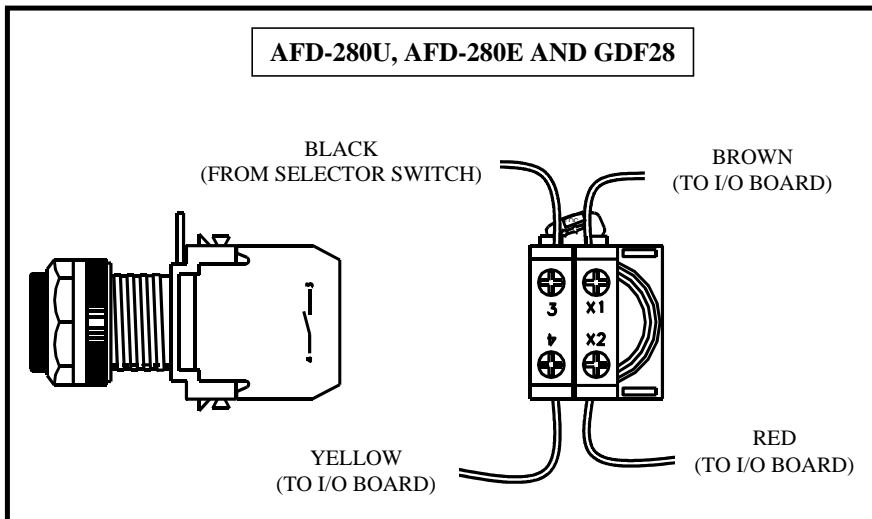
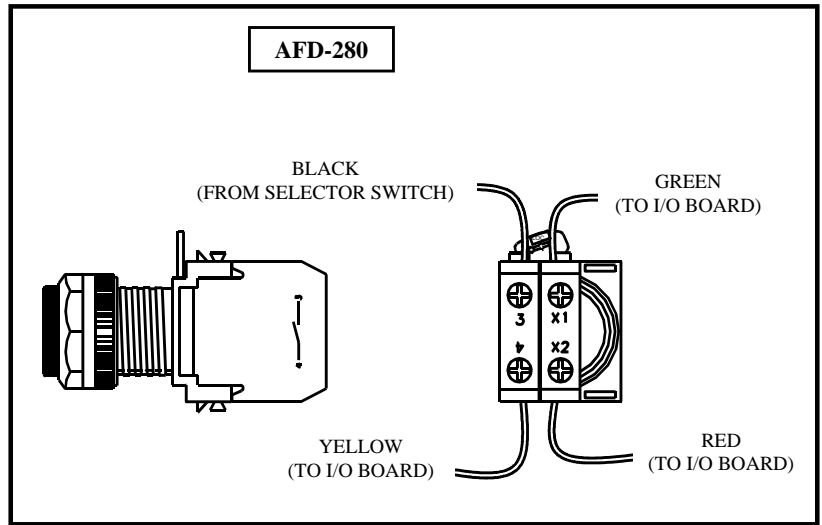


Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
 http://www.autoequiplc.com

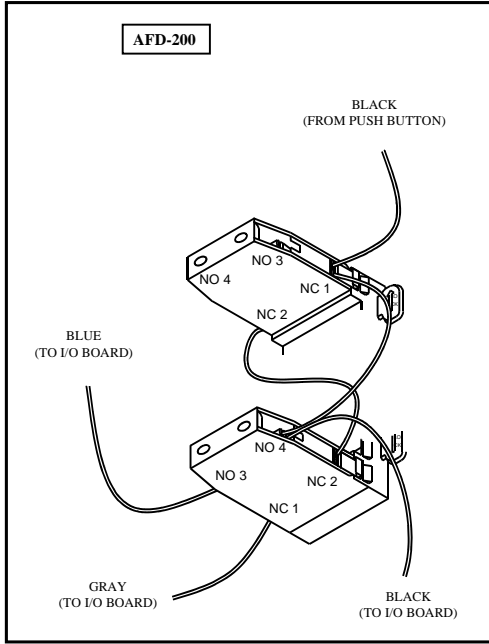

Wahlschalter T/N 215607

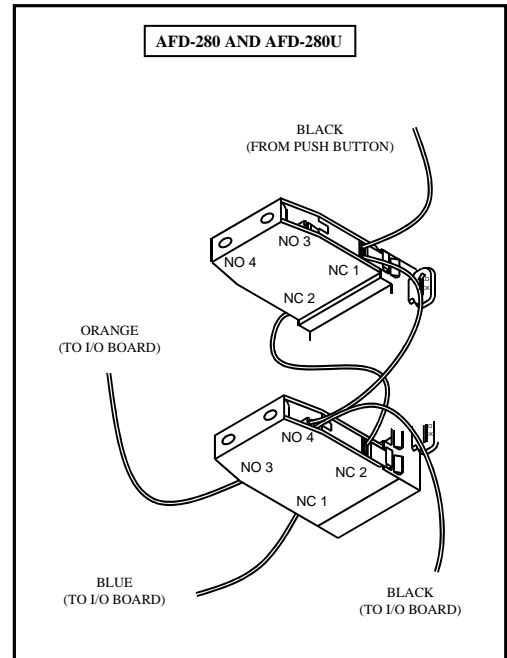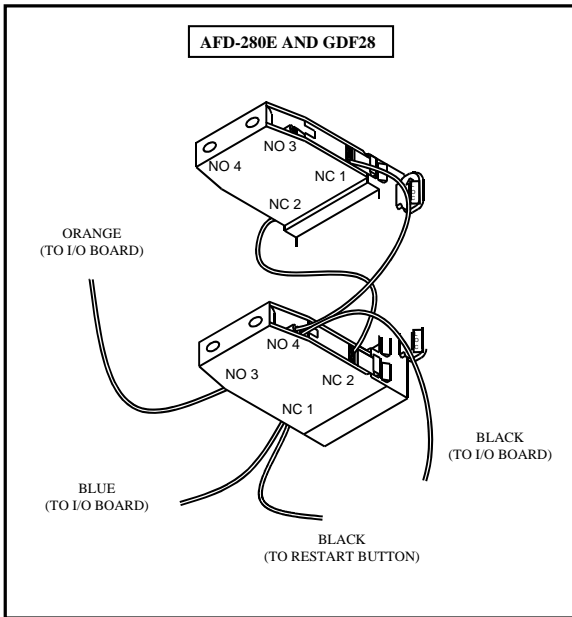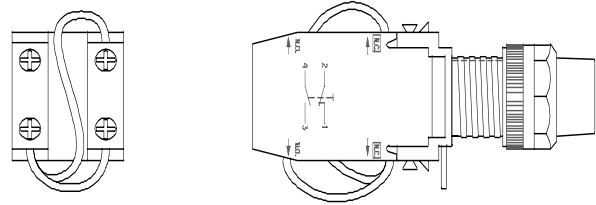

Bulletin #7

Automated Equipment, LLC
 5140 Moundview Drive
 Red Wing, Minnesota 55066
 Phone: 1-800-248-2724
 1-651-385-2273
 Fax: 1-651-385-2172
<http://www.autoequipllc.com>



Stromschalter

